

The procedure:

- 1. Ignition off - the key to OFF**
- 2. Press the SELECT and hold, all the time**
- 3. Turn the ignition on - the key to ON**
- 4. Watch the display - it should be a change from mph to km / h (or km / h in mph)**
- 5. Just release the SELECT**